

# **BALLAST LOAD TRANSFER CONTROL**

## **MODEL BLTC-2.4**

### **INSTALLATION INSTRUCTIONS**

#### **! IMPORTANT SAFEGUARDS !**

**WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:**

#### **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**

1. This product is for use with magnetic or electronic ballast and tungsten loads.
2. Make sure all connections are in accordance with the National Electrical Code and local Regulations and manufacturer's system wiring diagrams.
3. To reduce the risk of electric shock, disconnect both normal and emergency power Supplies before servicing.
4. Insure all 3 status leds are off on the BLTC-2.4 before servicing this equipment.
5. This control device is only to be mounted in a normal indoor environment and not in wet Or hazardous locations.
6. An unswitched AC power source is required. (120 or 277 VAC)
7. Do not install near gas or electric heaters.
8. Do not attempt to service a sealed Ballast Load Transfer Control, when malfunctioning.  
Return to Manufacturer: Barley Creek Ent. L.L.C. 869 Pioneer Drive Lebanon Junction KY 40150 or call 502-543-2932 fax 888-816-5936
9. The use of accessory equipment not recommended by the manufacturer may cause an Unsafe condition.
10. Do not use this product for other than intended use.
11. Servicing should be performed by qualified service personnel.
12. Equipment should be mounted in locations and at heights where it will not readily be Subjected to tampering by unauthorized personnel.

#### **SAVE THESE INSTRUCTIONS**

##### **Warranty**

12-Month Free Repair Service: To obtain this service the customer should ship defective product within the 12 month period to : Barley creek Ent. L.L.C. 869 pioneer drive Lebanon jct, KY 40150. Barley creek will honor its warranty provided the equipment has not been physically damaged or improperly installed or connected. To the extent permitted by applicable law, all warranties extending beyond repair or replacement as described above are disclaimed, including the implied warranties of merchantability and fitness for a particular purpose. Where applicable, law prohibits' disclaimers or the implied warranties of merchantability and fitness; those warranties are limited to 12 months from date of shipment. Barley creek does provide a 90-day money back guarantee if equipment does not perform in accordance with published specifications. The liability of Barley Creek Ent and its agents under all warranties is limited to repair and replacement as described herein, and under no circumstances shall there be liability for any other kind of loss, damage or labor, either consequential or for injury to person or property otherwise.

# BALLAST LOAD TRANSFER CONTROL

MODEL BLTC-120V • MODEL BLTC-277V

## INSTALLATION INSTRUCTIONS

### ! IMPORTANT SAFEGUARDS !

WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. This product is for use with magnetic or electronic ballast.
2. Make sure all connections are in accordance with the National Electrical Code and local regulations.
3. To reduce the risk of electric shock, disconnect both normal and emergency power supplies before servicing.
4. This Ballast Load Transfer Control is for factory or field installation in the ballast channel.
5. This product is for use in indoor fixtures except air handling heated air outlets, and wet, damp, or hazardous location fixtures.
6. An unswitched AC power source is required. (120 or 277 VAC)
7. Do not install near gas or electric heaters.
8. Do not attempt to service a sealed Ballast Load Transfer Control, when malfunctioning. Return to Manufacturer : LVS, Inc. 2555 Nicholson Street, San Leandro, CA 94577.
9. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
10. Do not use this product for other than intended use.
11. Servicing should be performed by qualified service personnel.
12. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.

### SAVE THESE INSTRUCTIONS

#### Warranty

120-Month Free Repair Service: To obtain this service the customer should ship defective product within the 120 month period to : LVS, Inc., 2555 Nicholson Street, San Leandro CA 94577. LVS will honor its warranty provided the equipment has not been physically damaged or improperly installed or connected. To the extent permitted by applicable law, all warranties extending beyond repair or replacement as described above are disclaimed, including the implied warranties of merchantability and fitness for a particular purpose. Where applicable, law prohibits disclaimers or the implied warranties of merchantability and fitness; those warranties are limited to 12 months from date of shipment. LVS does provide a 90-day money back guarantee if equipment does not perform in accordance with LVS published specifications. The liability of LVS and its agents under all warranties is limited to repair and replacement as described herein, and under no circumstances shall there be liability for any other kind of loss, damage or labor, either consequential or for injury to person or property or otherwise.